 
 


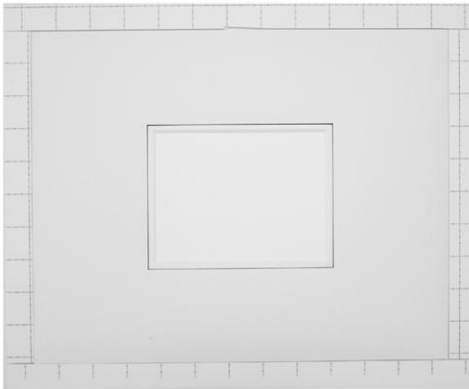

ULTIMAT

Signature Mount Instructions

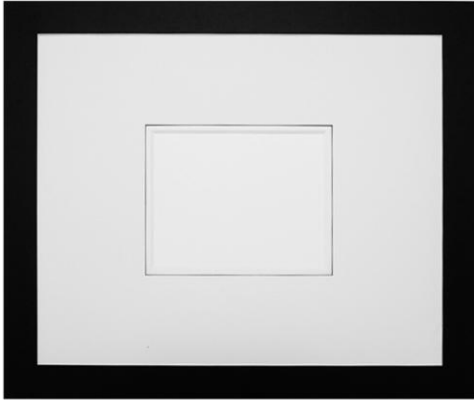

These mounts are designed to prevent the problem of guests signing to close to the edge of the mount only to be covered up by the rebate of the frame. The mount sits in a disposable caddy with a small amount of self-assembly on arrival. When you receive the mount, it will already be located in it's caddy.

If you wish to place a temporary pre-wedding photograph in the aperture, follow steps 1 to 3 in the instructions below. If you wish to place the photograph in the mount permanently, before the signature mount is populated, skip steps 1 to 3, affix your photograph using the pre-scored fastmount and then continue with steps 4 to 7.

1. The top black mount is hinged to the caddy and this should be opened and the mount removed.
2. The mount is also hinged to a piece of pre-scored fastmount. Open the mount and using a strip of tape, hinge your pre-wedding image to the back of the aperture.
3. Place the mount back into the caddy.
4. Remove the release paper from the foam-core strips around the top, bottom and right side of the caddy. This will reveal the self-adhesive layer of the foam-core.
5. Close the black mount on top of the mount and press on to the self adhesive strips.
6. This is then ready to present for signing.
7. To remove the signed mount, peel off the black top mount cover and discard.
8. To replace the temporary image in the mount, simply remove the temporary taped image from behind the mount. Affix your wedding image using the pre-scored fastmount board hinged to the signature mount. This will ensure that the photograph stays flat permanently. Please note that the adhesive on the fastmount is pressure-activated and therefore must be applied with a roller.

For advice using fastmount, please refer to the website or contact us directly. For more detailed instructions, please see our video demonstration.